



**DIGITAL CORDLESS TELEPHONE WITH  
ANSWERING MACHINE**

MODEL: DOT411, DOT412, DOT413, DOT414

 
Quick Start Guide

## 1. Welcome

EN

This booklet provides you the quick start information of your DOT41 digital cordless telephone. For a full explanation of all features and instructions, please refer to the User Guide which comes with this product and is also available as described at the bottom page of this booklet.

## 2. Contents inside the box



Cordless handset



Base



Charger



Power adaptor x 2



USB-C cable



Telephone line cord



Rechargeable Ni-MH  
battery cells x 2



Quick Start Guide


### Important

 Only use the telephone line cord supplied.

**If you have purchased a DOT41 multiple pack you will also have the following additional items:**

- Cordless handsets and chargers
- Rechargeable Ni-MH battery cells
- Power adaptors for the chargers


### 3. Getting started

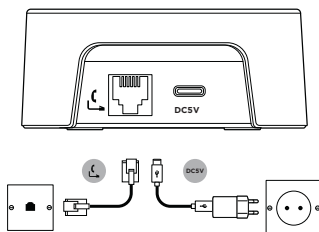


#### Connecting the base and handset

1. Plug the telephone line cord into the socket marked on the rear of the base.
2. Connect the USB-C cable to the supplied power adaptor. Then plug one end of the cable into the socket on the rear of the base and the other end into a wall socket. Switch on the power supply.
 
#### 3. Connecting the charger and charging the handset

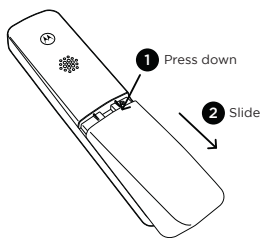

1. Remove the battery cover from the back of the handset and insert 2 x AAA NiMH rechargeable batteries supplied. Please note the '+' and '-' markings on the battery compartment and insert the batteries in the correct direction.
2. Slide the battery cover back into place.
3. Connect the USB-C cable attached to the charger to the supplied power adaptor, and plug it into a wall socket.
4. If you are charging the batteries for the first time, place the handset on the charger to charge for at least 16 hours continuously.
5. When the handset is fully charged, the icon will appear steadily on the display. The display will show **Handset** and the handset number to indicate that it is registered to the base.

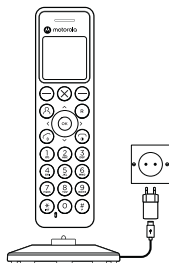 


#### Important

Warning! Use only the approved rechargeable Ni-MH battery cells (2 x AAA Ni-MH 750mAh rechargeable batteries) supplied with your DOT41.

## 4. Getting to know your phone
 
### Overview of your handset

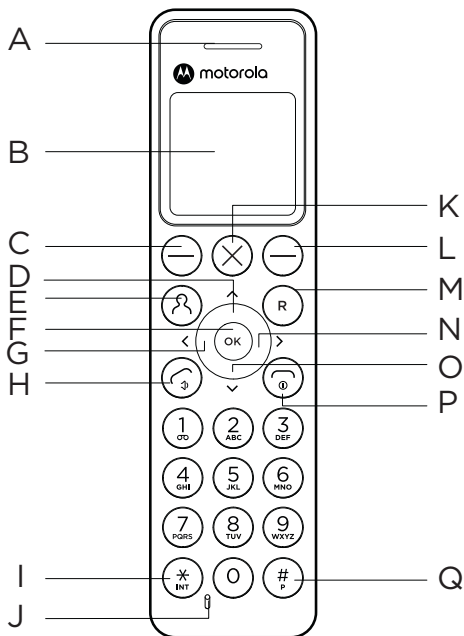

**A Earpiece**

**B Display**

See page 6 for an overview of display icons.

**C Left soft key**

Press to open the menu in idle mode.

Press to select menu options and to confirm a displayed option.

Press to switch to another call during a call.

**D Calls list / Up**

In standby mode, press to open the calls list.

During a call, press to increase the earpiece/speaker volume.

When the phone is ringing, press to increase the handset ringer volume.


Press to scroll up to the previous menu level.

In predial mode, press to move the cursor to the last line.


- E Contact list**  
Press to open the phonebook entries.
- F OK key**  
In standby mode, select the new message reminder icon to access incoming call lists or answering machine messages.  
Press to select menu options and to confirm or save a displayed option.
- G Left key**  
In standby mode, press to decrease the ringer volume. If two reminder icons are displayed, press to scroll between events.  
Press to scroll through the menu options.
- H Talk / Hands-free**  
Make or answer a call.  
Press to switch hands-free on or off during a call.
- I \* / Intercom / Switch from pulse to tone**  
In standby mode, press to dial a \*.  
Press and hold to make internal calls and transfer calls to other DOT41 handsets registered to the base.  
During a call, press to switch from pulse dialling to tone dialling.
- J Microphone**
- K Call block**  
Press to open the call block menu.
- L Right soft key**  
In editing mode, press to delete a character or digit. Press and hold to delete all characters and digits.  
During a call, press to turn the mute on or off.
- M Recall**  
Press to use the recall function with switchboard / PABX services and certain network services.
- N Right key**  
In standby mode, press to increase the ringer volume. If two reminder icons are displayed, press to scroll between events.  
Press to scroll through the menu options.
- O Redial / Down**  
In standby mode, press to open the redial list.  
During a call, press to decrease the earpiece/speaker volume.  
When the phone is ringing, press to decrease the handset ringer volume or ringer off.  
Press to scroll down to the next menu level.  
In predial mode, press to move the cursor to the next line.
- P End Call / Exit / Switch Handset on / off**  
Press to end a call.  
When viewing the redial / calls list / phonebook or when in the menu, press to exit and return to standby.  
Press and hold for 3 seconds to switch the handset on / off.
- Q # / Pause**  
In standby mode, press to dial a #.  
Press and hold to enter a pause (P) when pre-dialling or storing numbers.

## Handset LCD display





 Indicates signal strength.  
Flashes when handset is not registered to the base.

 Flashes to indicate a missed call.

 Handset ringer is off.

 Alarm is on.

 New message reminder.


 Indicates new voicemail messages received.<sup>1</sup>  
Off when there is no voicemail messages.


 The answer mode is on.


 The ECO mode is on.


 The ECO+ mode is on.


The approximate power levels of your battery are indicated as follows:

 Battery is 100% charged.

 Battery is 75% charged.

 Battery is 50% charged.

 Battery is 25% charged.

 Flashes when battery is almost fully discharged.

<sup>1</sup>This feature is dependent on your Network Service provider supporting the service. A subscription fee may be payable.

 
## Main menu icons

 Answer Phone

 Call Control



 All Calls

 Clock/Alarm

 Speed dial list

 Settings

## Overview of the base

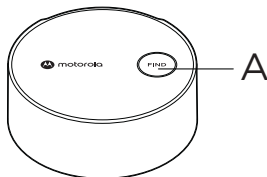  

### A Page/Register

In standby mode, press to ring the handset(s).

Press and hold to enter registration mode when registering handsets.



- EN** – Scan the QR to view the **USER GUIDE**
- ES** – Escanee el QR para ver la **GUIA USUARIO**
- PT** – Digitalize o código QR para ver o **GUIA DO UTILIZADOR**
- FR** – Scanner le code QR pour voir le **GUIDE DE L'UTILISATEUR**
- DE** – Scannen Sie den QR-Code, um die **BEDIENUNGSANLEITUNG** anzuzeigen.
- IT** – Scansionare il QR per visualizzare la **GUIDA UTENTE**
- NL** – Scan de QR om de **GEBRUIKERSHANDLEIDING** te bekijken
- PL** – Zeskanuj QR, aby wyświetlić **PODRĘCZNIK UŻYTKOWNIKA**
- CZ** – Naskenováním QR zobrazíte **UŽIVATELSKOU PŘÍRUČKU**
- HU** – Szkennelje be a QR-kódot a **HASZNÁLATI ÚTMUTATÓ** megtekintéséhez
- BG** – Сканирайте QR, за да видите **НАСОКИТЕ ЗА ПОЛЗВАНЕ**
- UA** – Відскануйте QR, щоб переглянути **ПОСІБНИК КОРИСТУВАЧА**
- RU** – Отсканируйте QR для просмотра **РУКОВОДСТВА ПОЛЬЗОВАТЕЛЯ**
- RO** – Scanați QR pentru a vizualiza **GHIDUL UTILIZATORULUI**
- GR** – Σαρώστε το QR για να δείτε τον **ΟΔΗΓΟ ΧΡΗΣΤΗ**
- SK** – Naskenovaním QR zobrazíte **UŽÍVATELSKÚ PRÍRUČKU**
- TR** – **KULLANICI KILAVUZUNU** görüntülemek için QR'ı tarayın
- HR** – Skenirajte QR kako biste vidjeli **KORISNIČKI VODIČ**





## EU Declaration of Conformity

Hereby, MZGW declares that the radio equipment type is in compliance with RE Directive 2014/53/EU.

## UK Declaration of Conformity

Hereby, MZGW declares that this product is in compliance with the requirements for UKCA marking.

Both the Declaration of Conformity for EU and UK can be obtained at: <https://motorolavoice.com/support/declaration-of-conformities/>

## Manufactured by:

Meizhou Guo Wei Electronics Co., Ltd., AD1 Section, The Economic Development Area, Meizhou, 514000, Guangdong Province, China

## Imported & Distributed by:

Meizhou Guo Wei Electronics (UK) Co., Ltd., 207 Regent Street, Suite 8, Third Floor, London, W1B 3HH. UK

Meizhou Guo Wei Electronics (EU) Co., Ltd., 51 Bracken Road, Carlisle Offices, Dublin 18, D18 CV48. Ireland

Contact email address: [support@motorolavoice.com](mailto:support@motorolavoice.com)

Manufactured, distributed or sold by Meizhou Guo Wei Electronics Co. LTD., official licensee for this product. MOTOROLA and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. and are used under license. All other trademarks are the property of their respective owners. © 2025 Motorola Mobility LLC. All rights reserved.

Version 2 (EU)

