



# motorola

DOT41 DIGITAL CORDLESS TELEPHONE  
WITH ANSWERING MACHINE

**For: DOT411, DOT412, DOT413 AND DOT414**

Warning: Charge the handset for 16 hours before use.

# Safety information

## Important

This equipment is not designed to make emergency telephone calls when the power fails. Alternative arrangements should be made for access to emergency services.

This product is intended for connection to analogue public switched telephone networks and private switchboards in Europe.

## Important safety instructions

Follow these safety precautions when using your phone to reduce the risk of fire, electric shock, and injury to persons or property:

- Keep all slits and openings of the phone unblocked. Do not set the phone on a heating register or over a radiator. Ensure that proper ventilation is provided at the installation site.
- Do not use while wet or while standing in water.
- Do not use this product near water (for example, near a bath tub, kitchen sink, or swimming pool).
- Do not allow anything to rest on the power cord. Place the power cord so that it will not be walked on.
- Never insert objects of any kind into the product vents as that may result in fire or electric shock.
- Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- Do not disassemble this product. If service or repair work is required, contact the customer service helpline found in this user's guide.
- Do not overload wall outlets and extension cords.
- Avoid using during an electrical storm. Use a surge protector to protect the equipment.
- Do not use this phone to report a gas leak, especially if you are in the vicinity of the gas line.

## Important

To reduce the risk of fire, use only the supplied power adaptor.

## Unplug this cordless phone immediately from an outlet if:

- The power cord or plug is damaged or frayed.
- Liquid has been spilled on the product.
- The product has been exposed to rain or water. Do not retrieve the handset or base until after you have unplugged the power and phone from the wall. Then retrieve the unit by the unplugged cords.
- The product has been dropped or the cabinet has been damaged.
- The product exhibits a distinct change in performance.

## **Installation Guidelines**

- Read and understand all instructions and save them for future reference.
- Follow all warnings and instructions marked on the product.
- Do not install this product near a bath tub, sink, or shower.
- Operate this phone using only the power source that is indicated on the marking label. If you are unsure of the power supply to your home, consult with your dealer or local power company.
- Do not place this product on an unstable cart, stand, or table. This product may fall, causing serious damage to the product.
- Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work to restore the product to normal operation.
- Clean this product with a soft, damp cloth. Do not use chemicals or cleaning agents to clean this phone.
- Use only the power supply that came with this unit. Using other power supplies may damage the unit.
- Because this phone operates on electricity, you should have at least one phone in your home that could operate without electricity in the case the power in your home goes out.
- To avoid interference to nearby appliances, do not place the base of the phone on or near a TV, microwave oven, or VCR.

## **Battery Safety Instructions**

- Do not burn, disassemble, mutilate, or puncture the battery. The battery contains toxic materials that could be released, resulting in injury.

### **Important**

There is a risk of explosion if you replace the battery with an incorrect battery type. Use only the batteries that came with your phone or an authorized replacement recommended by the manufacturer.

- Keep batteries out of the reach of children.
- Remove batteries if storing over 30 days.
- Do not dispose of batteries in fire, which could result in explosion.
- The rechargeable batteries that power this product must be disposed of properly and may need to be recycled. Refer to your battery's label for battery type. Contact your local recycling center for proper disposal methods.

**Save these instructions**

# Welcome...

## to your new **Motorola DOT41 Digital Cordless Telephone!**

- Large display (1.8") with backlight.
- Speakerphone for hands-free conversations.
- 200 name and number phonebook (3 per entry).
- Advanced call block that blocks up to 1000 numbers added to the blacklist.<sup>1</sup>
- Handset controlled answer machine with up to 100 minutes digital recording time.
- Create a multi-language pre-recorded outgoing message and voice prompts.
- Location-free base
- All handsets fully cordless for locating anywhere within range.
- Caller ID / call waiting shows you who is calling and lets you view details of the last 50 incoming calls and 30 outgoing calls in the Calls list.<sup>1</sup>
- Redial up to 30 of the last numbers called.
- Register up to 6 handsets to a single base.
- 20 polyphonic ringer melodies.
- Up to 18 hours of talk time and up to 240 hours of standby time.

Please note that this equipment is not designed for making emergency telephone calls when the power fails. Alternative arrangements should be made for access to emergency services.

## Need help?

If you have any problems setting up or using your DOT41, please contact Customer Services at [support@motorolavoice.com](mailto:support@motorolavoice.com)

Alternatively, you may find the answer in the 'Help' section at the back of this guide.

<sup>1</sup>You must subscribe to your network provider's Caller ID or Call Waiting service for these features to work. A subscription fee may be payable.

**This user guide provides you with all the information you need to get the most from your phone.**

**To set up your phone, follow the simple instructions in ‘Getting Started’, on the next few pages.**

### **Important**

Only use the telephone line cord supplied.

### **Got everything?**

- DOT41 base, charger and cordless handset
- 2 x rechargeable Ni-MH battery cells
- 2 x power adaptors for the base and charger
- USB-C cable
- Telephone line cord
- Quick start guide
- User manual (electronic copy)

**If you have purchased a DOT41 multiple pack you will also have the following additional items:**

- DOT41 Cordless handset and charger
- Rechargeable Ni-MH battery cells
- Power adaptors for the chargers

### **For a better tomorrow**

We make every effort through our design, research, engineering and supply chain management to make better products for everyone, focusing on both social and environmental responsibility.

- Meets and / or exceeds EMEA environmental regulatory requirements.
- Eco friendly packaging with a minimum 20% post consumer recycled content.
- Phone housing is built with a minimum of 25% post consumer recycled content plastic.
- Energy efficient charger that meets EU Code of Conduct requirements.

1.	Getting started .....	9
2.	Getting to know your phone .....	13
3.	Using the phone .....	19
3.1	Switch the handset on / off .....	19
3.2	Calls .....	19
3.2.1	Make a call .....	19
3.2.2	Preparatory dialling .....	19
3.2.3	Speed dial call .....	19
3.2.4	Call from the Contacts or Calls list .....	19
3.2.5	End a call .....	19
3.2.6	Receive a call .....	19
3.3	Adjust the earpiece volume .....	19
3.4	Mute .....	20
3.5	Intercom .....	20
3.5.1	Make an internal call .....	20
3.5.2	Receive an internal call .....	20
3.5.3	Switch between two calls .....	20
3.5.4	Transfer a call .....	20
3.5.5	3-way conference call .....	21
3.6	Hands-free .....	21
3.6.1	Make a hands-free call .....	21
3.6.2	Answer a call hands-free .....	21
3.6.3	Switch to hands-free during a call .....	21
3.7	Redial .....	21
3.8	Paging / Find handset .....	21
4.	Contacts .....	22
4.1	Store a name and number .....	22
4.2	View or dial an entry .....	23
4.3	Edit a name and number .....	23
4.4	Delete a selected entry .....	23
4.5	Delete all entries .....	23
4.6	View the memory status .....	24
5.	Speed dial .....	25
5.1	View the speed dial list .....	25
5.2	Store a speed dial number .....	25
5.3	Store a contact to the speed dial list .....	25
5.4	Dial a speed dial number .....	25
5.5	Edit a speed dial number .....	25
5.6	Delete a speed dial number .....	25
6.	Call control .....	26
6.1	Outgoing call control .....	26
6.1.1	Switch on/off and set a blocking mode .....	26
6.1.2	Set the announcement .....	26

6.2	Incoming call control .....	26
6.2.1	Add numbers to the blacklist.....	26
6.2.2	Add area codes to the blacklist.....	27
6.2.3	Remove all blocked numbers from the blacklist .....	27
6.2.4	Add numbers to the allowed list.....	27
6.2.5	Remove all allowed numbers from the list.....	27
6.3	Do Not Disturb mode .....	28
6.4	VIP list.....	28
6.4.1	Add contacts to the VIP list.....	28
6.4.2	Remove contacts from the VIP list.....	29
6.4.3	Set the VIP ringtone .....	29
6.5	Change the access PIN .....	29
7.	Caller ID and the Calls list .....	30
7.1	Caller ID .....	30
7.2	Calls list.....	30
7.2.1	View the Calls list .....	30
7.2.2	Dial a number in the Calls list.....	31
7.2.3	Store a Calls list number to the contact list .....	31
7.2.4	Allow a number.....	31
7.2.5	Block a number.....	31
7.2.6	Delete an entry .....	31
7.2.7	Delete the entire Calls list.....	31
8.	Clock & alarm .....	32
8.1	Set the alarm.....	32
8.2	Set time & date .....	32
8.3	Set the time format .....	32
8.4	Switch off the alarm ring.....	32
9	Settings.....	33
9.1	Sounds.....	33
9.1.1	Ring tones and volume.....	33
9.1.2	Handset tones on/off.....	33
9.2	Display .....	33
9.3	Handset name .....	34
9.4	Language.....	34
9.5	Call settings.....	34
	Auto answer .....	34
	Auto end call .....	34
	Auto join calls.....	34
	First ring.....	34
9.6	Base settings.....	35
9.6.1	Recall mode .....	35
9.6.2	Dial mode.....	35
9.6.3	Area code (country dependent).....	35
	Change the area code.....	35
	Make a call from the call logs.....	36
	Incoming call handling.....	36
9.7	Software version.....	36

9.8	Registration.....	36
9.8.1	Register a handset.....	36
9.8.2	De-register a handset.....	37
9.9	Change the system PIN .....	37
9.10	Eco mode (not available in the US) .....	37
9.11	Eco plus mode (not available in the US) .....	37
9.12	Reset .....	38
9.12.1	Reset the handset or base.....	38
9.12.2	Clear the handset or base user data .....	38
9.13	Default settings .....	38
10.	Using your Answering Machine.....	39
10.1	Switch the answering machine on / off .....	39
10.2	Listening to your messages .....	39
10.3	Delete a message.....	39
10.4	Delete all messages.....	40
10.5	Outgoing messages .....	40
10.5.1	Answer and record .....	40
10.5.2	Answer only.....	40
10.5.3	Record, play or delete your own outgoing message.....	40
10.6	Record memo .....	40
10.7	Answer mode .....	41
10.8	Settings.....	41
10.8.1	Ring delay .....	41
10.8.2	Set the maximum length of message and alert.....	41
10.8.3	Call screening .....	42
10.8.4	Set the answer machine auto on/off.....	42
10.8.5	Remote access .....	42
10.9	Telephone answer machine language.....	43
11.	Help .....	44
12.	Technical Specifications .....	46
13.	General information .....	47



# 1. Getting started

## Location

### Important

Do not place your phone in the bathroom or other humid areas.



Place your phone base within reach of the AC power outlet and telephone wall socket. The socket-outlet should be installed near the equipment and should be easily accessible.

Make sure that it is at least one meter away from other electrical appliances to avoid interference. Your phone works by sending radio signals between the handset and base. The strength of the signal depends on where you place the base. Placing it as high as possible ensures the best signal.

### Handset range

The unit has a range of up to 300 meters outdoors when there is a clear line of sight between the base and handset. Any obstruction between the base and handset will reduce the range significantly. With the base indoors and the handset either indoors or outdoors, the range will normally be up to 50 meters. Thick concrete and stone walls can severely affect the range.

### Signal strength

 on your handset indicates that you are within range of the base. When out of range of the base,  is off. If you are on a call, you will hear a warning beep.


The line will hang up if the handset moves out of range of the base. Move it closer to the base. The handset will automatically reconnect to the base.


## Setting up

### Important


The base station must be plugged into the AC power at all times. Do not connect the telephone line cord into the wall socket until the handset is fully charged. Use only the power adaptor and telephone line cord supplied with the product.


## Connecting the base

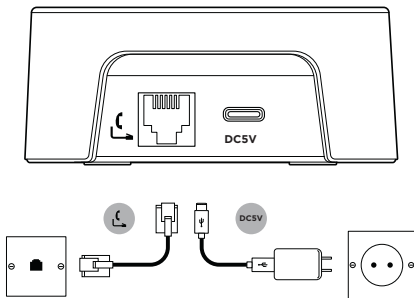


1. Plug one end of the telephone line cord into the socket marked  on the rear of the base, and the other into the telephone wall socket.
2. Connect the USB-C cable to the supplied power adaptor. Then plug one end of the cable into the socket on the rear of the base and the other end into a wall socket. Switch on the power supply.


## Installing and charging the handset

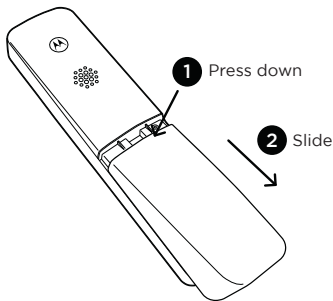

1. Remove the battery cover from the back of the handset and insert the 2 x AAA NiMH rechargeable batteries supplied. Please note the + and - markings on the battery compartment and insert in the correct direction.
2. Slide the battery cover back into place.
3. If you are charging the batteries for the first time, place the handset on the charger to charge for at least 16 hours continuously.
4. When the handset is fully charged,  will appear steadily on the display.

## Connecting the handset and charger

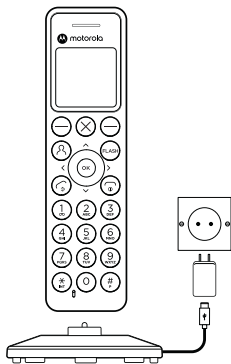

1. Remove the battery cover from the back of the handset and insert the 2 x AAA Ni-MH rechargeable batteries supplied. Please note the **+** and **-** markings inside the battery compartment and insert in the correct direction.
2. Slide the battery cover back into place.
3. Connect the USB-C cable attached to the charger to the supplied power adaptor, and plug it into a wall socket.
4. If you are charging the batteries for the first time, place the handset on the charger to charge for at least 16 hours continuously.
5. When the handset is fully charged,  will appear steadily on the display. The display will show **Handset** and the handset number (e.g. 2) to indicate that it is registered to the base.


### Note

If you have purchased a multiple pack, you will need to carry out this process for all the handsets and chargers.

### Important

Warning! Use only the approved rechargeable Ni-MH battery cells (2 x AAA Ni-MH 750mAh rechargeable batteries) supplied with your DOT41.

### Battery low warning

If  flashes on the display and you hear a warning beep every minute during a call, you will need to recharge the handset before you can use it again.

When charging,  will scroll on the display.

## Battery performance

In ideal conditions, fully charged batteries should give up to 18 hours talk time or up to 240 hours standby time on a single charge.<sup>1</sup>

Note that new batteries do not reach their full capacity until they have been put to normal use for several days.

To keep your batteries in the best condition, leave the handset off the charger for a few hours at a time.

Running the batteries completely down at least once a week will help them last as long as possible.

The charge capacity of rechargeable batteries will reduce over time as they wear out, giving the handset less talk / standby time. Eventually they will need to be replaced.

After charging your handset for the first time, subsequent charging time is about 6–8 hours a day. Batteries and the handset may become warm during charging. This is normal.

<sup>1</sup>All talk and standby times are approximate and depend on features selected and usage patterns.

## Welcome mode (country dependent)

When you turn on the phone for the first time, it will start in Welcome mode. You will be prompted to select your country, along with the date and time.

### Select your country (country dependent)

1. Scroll  $\wedge$  or  $\vee$  to select your country and press the left  $\ominus$  to confirm.
2. Press the left  $\ominus$  to proceed with setting the time and date.


### Date and time

1. Use the keypad to enter the time **HH/MM** (e.g. 06:30).
2. Press  $\vee$ , then scroll  $\leftarrow$  or  $\rightarrow$  to select **AM/PM**.
3. Press  $\vee$ , then use the keypad to enter the date **DD-MM-YYYY** (e.g. 12--08--2025 for 12th of August 2025) and press the left  $\ominus$  to save.

**Your DOT41 is now ready for use.**

## 2. Getting to know your phone

### Overview of your handset

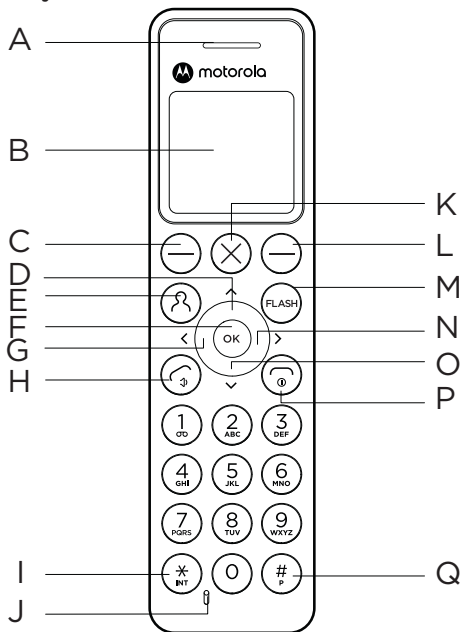

**A Earpiece**

**B Display**

See page 15 for an overview of display icons.

**C Left soft key**

Press to open the menu in idle mode.

Press to select menu options and to confirm a displayed option.

Press to switch to another call during a call.

**D Calls list / Up**

In standby mode, press to open the calls list.

During a call, press to increase the earpiece/speaker volume.

When the phone is ringing, press to increase the handset ringer volume.

Press to scroll up to the previous menu level.

In predial mode, press to move the cursor to the last line.

**E Contact list**

Press to open the phonebook entries.

**F OK key**

In standby mode, select the new message reminder icon to access incoming call lists or answering machine messages.

Press to select menu options and to confirm or save a displayed option.

**G Left key**

In standby mode, press to decrease the ringer volume. If two reminder icons are displayed, press to scroll between events.

Press to scroll through the menu options.

**H Talk / Hands-free**

Make or answer a call.

Press to switch hands-free on or off during a call.

**I \* / Intercom / Switch from pulse to tone**

In standby mode, press to dial a \*.

Press and hold to make internal calls and transfer calls to other DOT41 handsets registered to the base.

During a call, press to switch from pulse dialling to tone dialling.

**J Microphone****K Call block**

Press to open the call block menu.

**L Right soft key**

In editing mode, press to delete a character or digit. Press and hold to delete all characters and digits.

During a call, press to turn the mute on or off.

**M Flash key**

Use flash (F) functions.

**N Right key**

In standby mode, press to increase the ringer volume. If two reminder icons are displayed, press to scroll between events.

Press to scroll through the menu options.

**O Redial / Down**

In standby mode, press to open the redial list.

During a call, press to decrease the earpiece/speaker volume.

When the phone is ringing, press to decrease the handset ringer volume or ringer off.

Press to scroll down to the next menu level.

In predial mode, press to move the cursor to the next line.

**P End Call / Exit / Switch Handset on / off**

Press to end a call.

When viewing the redial / calls list / phonebook or when in the menu, press to exit and return to standby.

Press to switch on the handset. Press and hold to switch off the handset.


**Q # / Pause**

In standby mode, press to dial a #.


Press and hold to enter a pause (P) when pre-dialling or storing numbers.

## Handset LCD display





 Indicates signal strength.  
Flashes when handset is not registered to the base.

 Flashes to indicate a missed call.

 Handset ringer is off.


 Alarm is on.

 New message reminder.

 Indicates new voicemail messages received.<sup>1</sup>  
Off when there is no voicemail messages.


 The answer mode is on.


 The ECO mode is on.<sup>2</sup>


 The ECO+ mode is on.<sup>2</sup>


The approximate power levels of your battery are indicated as follows:

 Battery is 100% charged.

 Battery is 75% charged.

 Battery is 50% charged.

 Battery is 25% charged.


 Flashes when battery is almost fully discharged.

<sup>1</sup>This feature is dependent on your Network Service provider supporting the service. A subscription fee may be payable.

<sup>2</sup>This feature is not available in the US.

 
## Main menu icons

 Answer Phone

 Call Control


 
 All Calls

 Clock/Alarm

 Speed dial list

 Settings

## Overview of the base

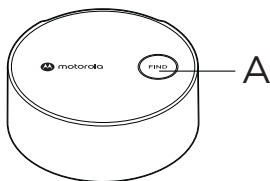

- A** In standby mode, press to ring the handset(s).  
Press and hold to enter registration mode when registering handsets.









## Navigating the menus

Your DOT41 has an easy-to-use menu system.

Each menu has a list of options, which you can see on the menu map on the following page.

When the handset is switched on and in standby mode:

1. Press the left  to open the main menu.
2. Then use  or  buttons to scroll through the available options.
3. Press the left  to select an option. To return to the previous menu level, press the right . To exit the menu and return to standby mode, press .

### Note

If no buttons are pressed for 60 seconds, the handset returns to standby mode automatically.

## Menu map

### Answer phone

View messages

Outgoing msg

Record memo

Answer mode

Settings

- Ring Delay
- Ans. & record
- Call screening
- Auto on/off
- Remote access

DTAM Language

### Call Control

Call Blocking

- Blocking settings
- Announce msg
- Block numbers
- Allow number

Do Not Disturb

VIP list

Change PIN

### All Calls

Calls list

- Show details
- Play message
- Save number
- Allow number
- Unblock number
- Block number
- Block contact
- Unblock contact
- Delete call
- Delete all

### Clock/Alarm

Alarm

Time and date

Time format

### Speed dial list

Speed dial list

### Settings

Sounds

- Ringing
- Handset tones

Display

- Contrast

Handset name

Language

Call settings

- Auto answer
- Auto end call
- Auto join calls
- First ring

Base settings

- Recall mode
- Dial mode
- Area code

S/ware version

Registration

Change Sys. PIN

ECO mode (not available in the US)

ECO plus mode (not available in the US)

Reset

### 3. Using the phone

#### Note


The handset will automatically time the duration of all external calls. The call timer will be displayed on the screen after the call starts dialling out. When the call ends, the total duration of the talk time stays on the display for 3 seconds.

#### 3.1 Switch the handset on / off



Press and hold .

#### 3.2 Calls

##### 3.2.1 Make a call

1. Press .
2. When you hear the dial tone, dial the number.

##### 3.2.2 Preparatory dialling

1. Dial the number first. If you make a mistake, press the right  to delete the last digit.
2. Press  to dial.

##### 3.2.3 Speed dial call

If you have stored the speed dial numbers, press and hold on the keypad in standby to make a call. The saved phone number will dial automatically. To set up a speed dial number, see page 25.

##### 3.2.4 Call from the Contacts or Calls list


You can make a call from the Contacts (see page 23) or Calls list (see page 31).

##### 3.2.5 End a call


Press .

##### 3.2.6 Receive a call



When you receive a call, the phone rings and and you will see on the display from if it is an internal or external call.

Press  to answer the call.

#### Note



- If Auto answer is switched on, you can simply lift the handset to answer a call.
- If Auto end call (see page 34) is switched off, you will need to press  to end a call.

#### 3.3 Adjust the earpiece volume

During a call, press  or  to increase or decrease the volume. There are 5 levels to choose from.

### 3.4 Mute

You can mute your handset so that you can talk to someone nearby without your caller hearing.

1. During a call, press the right . The display shows **Call muted** and your caller cannot hear you.
2. Press the right  again to unmute your call.

### 3.5 Intercom


#### 3.5.1 Make an internal call

If you have more than one handset registered to the base, you can make internal calls between two handsets.



1. Press  in standby.
2. Scroll  to select the handset to be called and press .

#### 3.5.2 Receive an internal call

When you receive an internal call, the handset number that is calling you is displayed.


 


Press  to answer the call.

#### Note

If during an internal call you receive an incoming call, you will hear an alert tone on the handset. Press the left  then  to hang up the internal call and answer the incoming call.

#### 3.5.3 Switch between two calls


 




If you need to make an internal call during an external call, you can put the external call on hold and switch between the two calls.

1. Press the left , scroll  to select **Ans. Call Waiting**, press the left  to switch to the internal call.
2. Press the left  again to switch back to the external call.

#### 3.5.4 Transfer a call

You can transfer an external call to another handset registered to the base.

During an external call:

1. Press the left , scroll  to select **Transfer call**, press the left .
2. If only 2 handsets are registered to the base, the other handset rings automatically.
3. If more than 2 handsets are registered to the base, scroll  to the handset that is to be called and press the left .
4. When the other handset answers, press the left  to complete the transfer.









#### Note

The external call resumes automatically after 30 seconds if there is no answer.

### 3.5.5 3-way conference call

You can hold a 3-way conference call between 2 internal callers and 1 external caller.




During a call with an external caller:

1. Press the left , select **Multi call**, press the left .
2. You can either:
  - enter the number you want to call and press the right ; or
  - press the left  and scroll  to select the handset that is to join the call and press the left .
  - press  on handset 2 to join the ongoing conference call with handset 1 directly, if the auto join calls feature is switched on for both handsets (see page 34).
3. All three callers are now connected to the conference call.
4. Press  to end the call.

## 3.6 Hands-free

To talk to the caller without holding the handset and for other people in the room to listen to the conversation over the loudspeaker, simply use the hands-free function.

### 3.6.1 Make a hands-free call


 
1. Dial the number and then press . The call can be heard over the handset loudspeaker.
2. Press  again to switch the call to loudspeaker.
3. Press  to end the call.

**Note:** During a hands-free call, press  or  to adjust the volume.

### 3.6.2 Answer a call hands-free

When the phone rings, press  twice to answer the call hands-free.

### 3.6.3 Switch to hands-free during a call

1. During a call, press  to put the call on the loudspeaker.
2. To switch hands-free off and return the call to the earpiece, press  again.


## 3.7 Redial

You can enter the calls list to redial a number, see page 31.

## 3.8 Paging / Find handset

You can alert a handset user that he/she is wanted or locate a missing handset.

Paging calls cannot be answered by a handset.


1. Press **FIND** on the base. All handsets registered to the base will ring.
2. To stop the ringing, press **FIND** on the base again or press the right  on the handset.

## 4. Contacts

You can store up to 200 records in your contacts. Each record can store up to 3 numbers, a name up to 25 characters long and a number up to 24 digits.



 






### 4.1 Store a name and number

If your phone is connected to a switchboard, you may need to enter a pause in a stored number. This gives the switchboard time to find an outside line.

A pause is normally stored after the switchboard access code (e.g. 9). When storing a number, press and hold  until the display shows **P**. You can then continue entering the phone number.

If you have subscribed to Caller ID Service and wish to display the name of your caller instead of the number, save the full telephone number including the area code to your contacts.

You can store multiple entries with the same name. However, to prevent unnecessary duplicated entries, you can only store the same number once.

1. Press  in standby mode to access the contact list.
2. Press the left , scroll  to **Add contact**.
3. Press the left , enter the name and press .
4. Enter the home number and press .
5. Enter the mobile number and press .
6. Enter the work number and press .
7. Press the left or right navigation key to select a ringtone.
8. Press the left  to save.

#### Note

You must enter at least the name and one number in order to save the contact.

#### Entering names

Use the keypad letters to enter names, e.g. to store **Tom**:

Press  once to enter **T**.


Press  three times to enter **o**.

Press  once to enter **m**.

#### Writing tips


 





Press the right  to delete the last character or digit.

Press  or  to move between characters or digits.


 



 






Press  to insert a space.

Press  to switch between the uppercase, lowercase letters and numbers.


 





 






## 4.2 View or dial an entry

1. Press  in standby mode to access the contact list.
2. Scroll  or  to select a contact.  
OR  
Enter the first letter of the name to search alphabetically.  
The first name that starts with this letter or the nearest letter in the alphabet will be displayed. Scroll  or  to the entry you want.
3. Press  to view the information or  to dial the number.


 











## 4.3 Edit a name and number

1. Press  in standby mode to access the contact list.
2. Scroll  or  to the entry you want to edit, or search alphabetically.
3. Press the left , select **Edit contact**.
4. Press the left , edit the name and press .
5. Edit the home number and press .
6. Edit the mobile number and press .
7. Edit the work number and press .
8. Press the  or  to select a ringtone.
9. Press the left  to save.

## 4.4 Delete a selected entry





1. Press  in standby mode to access the contact list.
2. Scroll  or  to the entry you want to edit, or search alphabetically.
3. Press the left , Scroll  to **Delete**.
4. Press the left . Scroll  or  to the entry you want to delete, or search alphabetically. Press  to select or deselect a contact or multiple contacts.
5. Press the left . Select **Delete Selected**. If you want to deselect all contacts, select **Clear selection**. Then press the left .
6. Press the left  to again or  to confirm confirm or the right  to cancel.

## 4.5 Delete all entries

1. Press  in standby mode to access the contact list.
2. Scroll  or  to the entry you want to edit, or search alphabetically.
3. Press the left , Scroll  to **Delete**.
4. Press the left  again, scroll  to **Select all**.
5. Press the left , all contacts are selected.
6. Press the left . Select **Delete Selected**. If you want to deselect all contacts, select **Clear selection**. Then press the left .
7. Press the left  to again or  to confirm confirm or the right  to cancel.

## 4.6 View the memory status

It shows the percentage of storage used by your contact information.







1. Press  in standby to access the contact list.
2. Press the left , scroll  to select **Memory status**.
3. Press the left  to view the information.




## 5. Speed dial

Your phone can store 9 speed dial number, from key 1 to key 9. The speed dial number can be up to 24 digits.

### 5.1 View the speed dial list

1. Press the left  in standby mode, scroll  or  to **Speed dial list**.
2. Press the left , scroll  or  to view the entries.











### 5.2 Store a speed dial number

1. In standby mode, enter the phone number.
2. Press and hold a speed dial key from 1 - 9 you want to store the number under.
3. If the speed dial key was not assigned before, the new number will be saved directly. If the new number is to replace the old number, press the left  to confirm.

#### Note

If you want to change the speed dial number, repeat the steps in 5.2 above.









 

### 5.3 Store a contact to the speed dial list

1. Press  in standby mode to access the contacts.
2. Scroll  or  to select a contact, press .
3. Press the left , scroll  to select **Set speed dial**.
4. Press the left , scroll  or  to select a speed dial key from 1 - 9 you want to store the number under.
5. Press the left  to save.












### 5.4 Dial a speed dial number

In standby mode, press and hold the speed dial key under which the number is stored to make a call directly.

### 5.5 Edit a speed dial number

1. Press the left  in standby mode, scroll  or  to **Speed dial list**.
2. Press the left , scroll  or  to select a speed dial key.
3. Press the left , select **Edit** and press the left .
4. Press the right  to delete the existing number.
5. Enter the new number and press the left  to save.

### 5.6 Delete a speed dial number

1. Press the left  in standby mode, scroll  or  to **Speed dial list**.
2. Press the left , scroll  or  to select a speed dial key.
3. Press the left , scroll  to select **Delete** and press the left .
4. Press the left  again to confirm or the right  to cancel.

## 6. Call control

You can set the phone to block outgoing calls to or incoming calls from certain numbers. For this feature to work, you must subscribe to Caller ID Service from your network operator. A subscription fee may be payable. A subscription fee may be payable. You can access the **Call Control** menu by pressing (X) in standby mode or through the handset menu.

### 6.1 Outgoing call control

#### 6.1.1 Switch on/off and set a blocking mode

1. Press (X) in standby mode. Enter the access PIN (default = 0000).
2. Press the left (←), **Call Blocking** is displayed.
3. Press the left (←), **Blocking settings** is displayed.
4. Press the left (←), under **On/Off**, scroll < or > to select **On** or **Off**.
5. Scroll ∨ to **Blocking mode**, scroll < or > to select **Announce** (calls screened by the answer machine), **Ans. phone** (i.e. calls always sent to the answer machine) or **custom** (i.e. set by the customer) to be barred.
6. Press the left (←) to save.

#### 6.1.2 Set the announcement

This is the message you leave to notify your family that the number is barred.




1. Press (X) in standby mode. Enter the access PIN (default = 0000).
2. Press the left (←), **Call Blocking** is displayed.
3. Press the left (←), scroll ∨ to select **Announce msg**.
4. Press the left (←), scroll ^ or ∨ to select either **Record name**, **Play message**, or **Use default msg** and press the left (←).
  - If you select **Record name**, once you hear the beep, speak the names or numbers into the handset. To end and save your recording, press the left (←). The names and numbers that are being barred will be included in the message.
  - If you select **Play message**, the current outgoing message will play back.
  - If you select **Use default msg**, press the left (←) and scroll < or > to select **On** or **Off**. Press the left (←) to confirm.

### 6.2 Incoming call control

#### 6.2.1 Add numbers to the blacklist











When phone numbers are added to the blacklist, calls from those phone number will not ring on your phone. Up to 1000 numbers can be added to an invisible blacklist.

1. Press (X) in standby mode. Enter the access PIN (default = 0000).
2. Press the left (←), **Call Blocking** is displayed.
3. Press the left (←), scroll ∨ to select **Block numbers**.








4. Press the left , **Add number** is displayed.
5. Press the left , enter the number.
6. Press the left  to confirm.

### 6.2.2 Add area codes to the blacklist

When area codes are added to the blacklist, all incoming calls from those areas will be blocked.








1. Press  in standby mode. Enter the access PIN (default = 0000).
2. Press the left , **Call Blocking** is displayed.
3. Press the left , scroll  to select **Block numbers**.
4. Press the left , scroll  to select **Area codes**.
5. Press the left , enter the area code.
6. Press the left  and enter the area code.
7. Press the left  to save.
8. To add another area code, press the left .
9. **Add area code** is displayed.
10. Repeat steps 5 - 7 above.

### 6.2.3 Remove all blocked numbers from the blacklist








1. Press  in standby mode. Enter the access PIN (default = 0000).
2. Press the left , **Call Blocking** is displayed.
3. Press the left , scroll  to select **Block numbers**.
4. Press the left , scroll  to select **Delete all**.
5. Press the left  twice to confirm.

### 6.2.4 Add numbers to the allowed list

When phone numbers are added to the allowed call, calls from those phone numbers are always accepted to your phone.





 

 

 

 

 

1. Press  in standby mode. Enter the access PIN (default = 0000).
2. Press the left , **Call Blocking** is displayed.
3. Press the left , scroll  to select **Allow numbers**.
4. Press the left , **Add number** is displayed.
5. Press the left , enter the number.
6. Press the left  to confirm.

### 6.2.5 Remove all allowed numbers from the list



 

1. Press  in standby. Enter the access PIN (default = 0000).
2. Press the left , **Call Blocking** is displayed.
3. Press the left , scroll  to select **Allow numbers**
4. Press the left , scroll  to select **Delete all**.
5. Press the left  twice to confirm.

### 6.3 Do Not Disturb mode

When **Do not disturb** mode is activated, your handset does not ring and the handset screen does not light up. If you still want to receive important calls, you can set to exclude certain VIP calls from **Do Not Disturb** mode.

1. Press  in standby mode. Enter the access PIN (default = 0000).
2. Press the left , scroll  to select **Do Not Disturb**.
3. Press the left , under **On/Off**, scroll  or  to select **On**, **Timed** or **Off**.
4. If you select **Timed**,
  - press , enter the start time (HH:MM) e.g. 10:30.
  - Press , scroll  or  to select **AM** or **PM** if you preset the time format to 12 hours.
  - Press , enter the end time (HH:MM) e.g. 11:30.
  - Press , scroll  or  to select **AM** or **PM** if you preset the time format to 12 hours.








 





For information on time settings, see page 32.

5. Press  to **VIP calls**, scroll  or  to select **Allowed** or **Barred**.
6. Press the left  to save.

### 6.4 VIP list

When contacts are added to the VIP list, you can set to exclude this list from **Do not disturb** mode. Make sure you have **VIP calls** set to **Allowed** (see page 28).

#### 6.4.1 Add contacts to the VIP list

1. Press  in standby mode. Enter the access PIN (default = 0000).
2. Press the left , scroll  to select **VIP list**.
3. Press the left  to view the VIP contact list.
4. Press the left , select **Add VIPs**.
5. Press the left , scroll  or  and press  to select the contacts.
6. Press the left , **Add selected** is displayed. If you want to deselect your contacts, scroll  to select **Clear selection**.
7. Press the left  to save.
8. To add more VIPs to the list, press the left .
9. **Add VIPs** is displayed. Repeat steps 5 - 7 above.

#### Note

You can add up to 4 VIPs to your VIP list. When the maximum number is reached, the **Add VIPs** option will no longer be available.

### 6.4.2 Remove contacts from the VIP list

1. Press (X) in standby mode. Enter the access PIN (default = 0000).
2. Press the left (←), scroll ▼ to select **VIP list**.
3. Press the left (←) to view the VIP contact list.
4. Press the left (←), scroll ▼ to select **Remove VIPs**.
5. Press the left (←), scroll ▲ or ▼ and press (OK) to select the contacts.
6. Press the left (←), **Remove selected** is displayed. If you want to deselect your contacts, scroll ▼ to select **Clear selection**.
7. Press the left (←) twice to confirm.
8. To remove more VIPs to the list, press the left (←).
9. Scroll ▼ to select **Remove VIPs**. Repeat steps 5 - 7 above.

### 6.4.3 Set the VIP ringtone

You can identify incoming calls from VIPs easier by assigning a different ringer melody to the VIP list.

1. Press (X) in standby mode. Enter the access PIN (default = 0000).
2. Press the left (←), scroll ▼ to select **VIP list**.
3. Press the left (←) to view the VIP contact list.
4. Press the left (←), scroll ▼ to select **VIP ringtone**.
5. Press the left (←), scroll < or > to select a melody of external calls (**Normal** or 1 - 20).
6. Press the left (←) to save.

## 6.5 Change the access PIN

The default call control access PIN is 0000. You can change it to your preferred PIN.

1. Press (X) in standby mode. Enter the access PIN (default = 0000).
2. Press the left (←), scroll ▼ to select **Change PIN**.
3. Press the left (←) twice, enter the old access PIN.
4. Press the left (←), enter a new 4 digit access PIN.
5. Press the left (←), enter a new 4 digit access PIN again.
6. Press the left (←) to save.

### Note

The call control access PIN set will also be used as the remote access PIN (See page 42).

## 7. Caller ID and the Calls list

### Important

To use Caller ID, you must first subscribe to the service from your network provider. A subscription fee may be payable.

To ensure that the caller's name is displayed, make sure you have stored the full telephone number, including the area code in Contacts.

### 7.1 Caller ID

If subscribed to a Caller ID service, the caller's number will be displayed (provided it is not withheld) prior to answering the call. The display can show the last 12 digits or characters of the phone numbers or names.

If the caller's name and number are stored in Contacts and a number match is found, the caller's name will be displayed instead.

If the call is a private call, **Private** will be displayed.

If the number is unavailable, **Unavailable** will be displayed.

If the call is from an international number, the number and **International** will be displayed.

If the call is from the operator, **Operator** will be displayed.



If the call is from a payphone, **Payphone** will be displayed.


 
 



If the call is from a ringback request, **Ringback** will be displayed.

### 7.2 Calls list


 
 
 

The Calls list stores details of your last 50 incoming calls and 30 outgoing calls, including the phone number and date and time of the call. The Calls list also alerts you when you have unanswered calls.

The caller's details are stored in the Calls list whether or not you have answered the call. The list is shared by all handsets registered to the base. When the list is full, and a new call is received, the oldest entry will be deleted automatically.

When you have missed call(s) (incoming calls that you haven't answered),  is displayed on all handsets registered to the base. Press the left  to see the callers details.

1. Press  in standby mode to open the Calls list.
  - The most recent number (and name if stored in Contacts) is displayed.
2. Press  or  to scroll through the list.
  - If the call was answered,  is displayed as you scroll to the entry. If the call was unanswered,  is displayed as you scroll to the entry.
  - Press the left  to access the options to view, save the entry to your contacts, allow the number, delete the number, delete all numbers or block the number.

#### 7.2.1 View the Calls list

1. Press  in standby mode to open the Calls list.
2. Scroll  or  to the entry you want.
3. Press the left , the display shows **Show details**.
4. Press the left  to view the number and type of calls.

### 7.2.2 Dial a number in the Calls list

1. Press  $\wedge$  in standby mode to open the Calls list.
2. Scroll  $\wedge$  or  $\vee$  to the entry you want.
3. Press the left  $\ominus$ , the display shows **Show details**. Press the left  $\ominus$ .
4. Press the left  $\ominus$  again or  $\$$  to dial the displayed entry.

### 7.2.3 Store a Calls list number to the contact list

If a phone number is stored in the calls list but is not yet stored in Contacts, you can save the name and number.

1. Press  $\wedge$  in standby mode to open the Calls list.
2. Scroll  $\wedge$  or  $\vee$  to the entry you want.
3. Press the left  $\ominus$ , scroll  $\vee$  to **Save number**.
4. Press the left  $\ominus$ , scroll  $\wedge$  or  $\vee$  to select **New contact** or **Add to contact**.
5. Follow the screen instruction to complete the details.
6. Press the left  $\ominus$  to save.

### 7.2.4 Allow a number

1. Press  $\wedge$  in standby mode to open the Calls list.
2. Scroll  $\wedge$  or  $\vee$  to the entry you want.
3. Press the left  $\ominus$ , scroll  $\vee$  to **Allow number**.
4. Press the left  $\ominus$  twice to confirm.

### 7.2.5 Block a number

1. Press  $\wedge$  in standby mode to open the Calls list.
2. Scroll  $\wedge$  or  $\vee$  to the entry you want.
3. Press the left  $\ominus$ , scroll  $\vee$  to **Block number** (displayed if the number is not blocked) or **Unblock number** (displayed if the number has been blocked).
4. Press the left  $\ominus$  twice to confirm. To unblock this number, repeat steps 1 - 4.

### 7.2.6 Delete an entry

1. Press  $\wedge$  in standby mode to open the Calls list.
2. Scroll  $\wedge$  or  $\vee$  to the entry you want.
3. Press the left  $\ominus$ , scroll  $\vee$  to **Delete call**.
4. Press the left  $\ominus$  to confirm or the right  $\ominus$  to cancel.





 

 
 
 
 


 

### 7.2.7 Delete the entire Calls list

1. Press  $\wedge$  in standby mode to open the Calls list.
2. Scroll  $\wedge$  or  $\vee$  to the entry you want.
3. Press the left  $\ominus$ , scroll  $\vee$  to **Delete all**.
4. Press the left  $\ominus$  twice to confirm or the right  $\ominus$  to cancel.


 



 
 

 
 
## 8. Clock & alarm

If you have subscribed to Caller ID Service, the date and time will be set on your handset whenever a call is received. You can also manually set the date and time.


 



 

 
### 8.1 Set the alarm

1. Press the left  in standby mode. Scroll  to **Clock/Alarm**.
2. Press the left , select **Alarm**.
3. Press the left , scroll  or  to select **On once, On daily, Mon to Fri, Sat & Sun** or **Off**.
4. Scroll , enter the time (HH:MM) e.g. 04:30.
5. Scroll , scroll  or  to select **AM** or **PM** if you preset the time format to 12 hours.
6. Scroll , scroll  or  to select a melody. Press the left  to save.




 
### 8.2 Set time & date

1. Press the left  in standby mode. Scroll  to **Clock/Alarm**.
2. Press the left , scroll  to select **Time and date**.
3. Press the left , enter the time (HH:MM) e.g. 04:30.
4. Scroll , scroll  or  to select **AM** or **PM** if you preset the time format to 12 hours.
5. Scroll , enter the date using the format MM-DD-YYYY e.g. 25--12--2025 for 25th of December 2025 and press the left  to save.

### 8.3 Set the time format

1. Press the left  in standby mode. Scroll  to **Clock/Alarm**.
2. Press the left , scroll  to select **Time format**.
3. Press the left , scroll  or  to select **12 Hours** or **24 Hours**. Then press the left  to save.

### 8.4 Switch off the alarm ring

Once the alarm is turned on,  is displayed. When the alarm sounds, press ,  or the right  to stop it. Pressing any other key will snooze the alarm, which will ring again after 10 minutes.








 


 
 
 
 
 
 




## 9 Settings

### 9.1 Sounds














#### 9.1.1 Ring tones and volume

You can set different ringer melodies and adjust ringer volume levels for your internal, external and announced calls (i.e. calls screened by the answer machine). Choose from 20 different ringer melodies and 5 volume levels and **Ringer Off**. You will hear a sample ring and volume level as you scroll to each option.

1. Press the left  in standby mode, scroll  to **Settings**.
2. Press the left , select **Sounds**.
3. Press the left , select **Ringing**.
4. Press the left , scroll  or  to select a melody of external calls (1 - 20).
5. Press , scroll  or  to select a melody of internal calls (1 - 20).
6. Press , scroll  or  to select a melody of announced calls (1 - 20).
7. Press , scroll  or  to select a volume level (1 - 5 and **Ringer Off**).
8. Press the left  to confirm or the right  to return to the previous menu.










#### 9.1.2 Handset tones on/off

When you press a button on the handset keypad or to confirm a selection, you will hear a beep. You can switch these beeps on or off.

1. Press the left  in standby mode, scroll  to **Settings**.
2. Press the left , select **Sounds**.
3. Press the left , then scroll  to select **Handset tones**.
4. Press the left , scroll  or  to set the keypad tones **On** or **Off**.
5. Press , scroll  or  to set the confirmation tones **On** or **Off**.
6. Press the left  to confirm or the right  to return to the previous menu.







### 9.2 Display

You can set the contrast level your handset screen.

1. Press the left  in standby mode, scroll  to **Settings**.
2. Press the left , scroll  to select **Display**.
3. Press the left , scroll  or  to select from 5 contrast levels.
4. Press the left  to confirm or the right  to return to the previous menu.

### 9.3 Handset name

If you are using more than one handset with your phone base, you can set a personalized name for each handset to easily distinguish between them. A name can be up to 12 characters long.










1. Press the left  in standby mode, scroll  to **Settings**.
2. Press the left , scroll  to select **Handset name**.
3. The display shows the current name.
4. Edit the name and press the left  or  to confirm.

#### Note

For information of how to enter the handset name, see “Entering names” and “Writing tips” on page 22.

### 9.4 Language

You can select the language displayed on your handset screen.

1. Press the left  in standby mode, scroll  to **Settings**.
2. Press the left , scroll  to select **Language**.
3. Press the left , scroll  or  to select a language, press the left  or  to confirm.

### 9.5 Call settings

You can enable or disable the following call features.


#### Auto answer

Lift the cordless handset from the base or charger cradle and you will be connected to the incoming call automatically. You can switch this feature on or off.

#### Auto end call











Place the cordless handset to the charger to end the call. You can switch this feature on or off.




 




#### Auto join calls

When this feature is switched on and handset 1 is on a call, press  on handset 2 to join the call.

#### First ring

When it is switched on, the phone starts ringing immediately before the ID is displayed when receiving a call. When it is switched off, the caller ID is displayed before the phone starts ringing. For this feature to work, you must first subscribe to the service from your network provider. A subscription fee may be payable.











1. Press the left  in standby mode, scroll  to **Settings**.
2. Press the left , scroll  to select **Call settings**.
3. Press the left , scroll  or  to set the auto answer **On** or **Off**.
4. Press , scroll  or  to set the auto end call **On** or **Off**.

5. Press , scroll  or  to set the auto join calls **On** or **Off**.
6. Press , scroll  or  to set the first ring **On** or **Off**.
7. Press the left  to confirm or right  to return to the previous menu.

## 9.6 Base settings

 









### 9.6.1 Recall mode

It is the amount of time the phone waits before automatically redialing the number if the call is not successfully connected. Your phone is already preset with a default recall duration for each option you select.

1. Press the left . Scroll  to **Settings**.
2. Press the left , scroll  to select **Base settings**.
3. Press the left , scroll  to select **Recall mode**.
4. Press the left , scroll  or  to select **Short**, **Medium** or **Long**.
5. Press the left  to confirm.

### 9.6.2 Dial mode

Your phone is set to tone dialing. You should only need to change this if connected to an older type of switchboard / PBX which requires pulse dialing.









1. Press the left , scroll  to **Settings**.
2. Press the left , scroll  to select **Base settings**.
3. Press the left , scroll  to select **Dial mode**.
4. Press the left . Then scroll  or  to select **Tone** or **Pulse**.
5. Press the left  to confirm.

### 9.6.3 Area code (country dependent)

Setting an area code helps you recognize and manage your calls more easily and efficiently.


#### Change the area code

You can set or change an area code of up to 3 digits. The default area code is 555.


1. Press the left , scroll  to **Settings**.
2. Press the left , scroll  to select **Base settings**.
3. Press the left , scroll  to select **Area code**.
4. Press the left . Then enter the area code.
5. Press the left  to confirm.

## Make a call from the call logs

When you browse the received and missed call logs, the phone will display the number in different formats.

For example, if the number is 1234567, press  to switch between

- 1234567 (7-digit local number)
- 5551234567 (10-digit number: area code + local number)
- 15551234567 (11-digit number: country code + area code + local number)


 

 

When your preferred format is displayed, press  to make a call.

## Incoming call handling

When you receive a call with a 10 or 11 digit number, and the area code matches yours, the phone will only save the last 7 digits in the call log,

## 9.7 Software version

You can view the current software version using for your handset and base.




 

 


1. Press the left , scroll  to **Settings**.
2. Press the left , scroll  to select **S/ware version**.
3. Press the left  to see the information.

## 9.8 Registration


 








Up to 6 handsets can be registered to one base station. Additional handsets must be registered to the base before you can use them.

- The instructions described below apply specifically to your handset. If you wish to register another manufacturer's handset, the instructions may vary. In this case, please refer to the manufacturer of the additional handset.
- The Master PIN is required before you can register or unregister handsets. The PIN is 0000.

### 9.8.1 Register a handset








1. Press the left  in standby, scroll  to **Settings**.
2. Press the left , scroll  to select **Registration**.
3. Press the left , scroll  to select **Register**.
4. Press the left . Then press and hold **FIND** on the base until you hear a beep.
5. Press the left  on the handset to start the registration.
6. Enter the PIN if necessary. It will take less than 2 minutes for the handset to complete the registration.

### 9.8.2 De-register a handset

1. Press the left  in standby, scroll  to **Settings**.
2. Press the left  , scroll  to select **Registration**.
3. Press the left  , scroll  to select **De-register**.
4. Press the left  , scroll  or  to select the handset you want to delete.
5. Press the left  . Enter the PIN if necessary. De-registration is complete.











### 9.9 Change the system PIN

The system PIN is different from the call control PIN and remote access PIN.

1. Press the left  , scroll  to **Settings**.
2. Press the left  , scroll  to select **Change Sys. PIN**.
3. Press the left  , enter the 4 digit PIN.
4. Press the left  , enter the 4 digit PIN again.
5. Press the left  to confirm.

### 9.10 Eco mode (not available in the US)

The Eco mode function reduces transmission power and energy consumption when activated.











1. Press the left  , scroll  to **Settings**.
2. Press the left  , scroll  or  to select **ECO mode**.
3. Press the left  . Then scroll  or  to select **On** or **Off**.
4. Press the left  to confirm.  is displayed.

#### Note

When ECO mode is turned on, the connection range between the handset and base may be shorter as they have to reduce power to save energy.

### 9.11 Eco plus mode (not available in the US)

The Eco plus mode function eliminates the radiation from your phone when it is switched on.

1. Press the left  , scroll  to **Settings**.
2. Press the left  , scroll  or  to select **ECO plus mode**.
3. Press the left  . Then scroll  or  to select **On** or **Off**.
4. Press the left  to confirm.  is displayed after 20 seconds.

#### Note

When ECO plus mode is activated, the standby time decreases because the base stops sending signals in standby mode. The handset has to check for signals from the base more often to detect calls or requests. This slows down features like call settings, call lists, paging, and contacts browsing. Also, the handset will not warn you if the connection is lost due to power failure or moving out of range.







 

## 9.12 Reset

### 9.12.1 Reset the handset or base

You can restore your DOT41 to its default (original) settings. All the handsets that are registered to the base will be retained.








#### Important

Resetting your phone will restore all handset and base settings to its default settings but Contacts and Calls lists will be retained.

1. Press the left , scroll  to **Settings**.
2. Press the left , scroll  to select **Reset**.
3. Press the left , scroll  or  to select **H/set settings** (if you want to reset the handset) or **Base settings** (if you want to reset the base).
4. Press the left  twice to confirm. The handset will restart automatically.

### 9.12.2 Clear the handset or base user data

This will delete the information of all your Contacts, Calls list, incoming and outgoing messages on the answer machine.

1. Press the left , scroll  to **Settings**.
2. Press the left , scroll  to select **Reset**.
3. Press the left , scroll  to select **Clear user data**.
4. Press the left  twice to confirm.

## 9.13 Default settings








Handset name	Handset
Ringer tone	1
Handset ringer volume	3
Recall mode	Short
Contacts	Empty
Calls list	Empty
PIN code	0000
Dial mode	Tone
First ring	Off
Display	3
Language	English
Answer mode	Ans. & Rec

## 10. Using your Answering Machine




 





 

 
 
The phone can digitally record up to 100 minutes of messages.

The answering machine can be operated from the handset or remotely from any other DTMF telephone (see page 42).





 




### 10.1 Switch the answering machine on / off

1. Press the left  in standby mode, **Answer Phone** is displayed.
2. Press the left , scroll  to **Answer mode**.
3. Press the left , under **Answer on/off**, scroll  or  to select **On** or **Off**.
4. Press the left  to save.







### 10.2 Listening to your messages

1. Press the left  in standby mode, **Answer Phone** is displayed.
2. Press the left , **View messages** will be displayed if there are messages.
3. Press the left , a list of messages is displayed with the most recent first. You can either:
  - scroll  or  to select a new message, press  to listen to the message; or
  - press the left , then press the left  again to listen to all messages.
4. During playback, there is a list of options.
  - Press  or  to adjust the playback volume.
  - Press  to switch hands-free on or off during playback.
  - Press  to repeat the current message.
  - Press the left  to delete the message.
5. You will hear 'End of messages' at the end of the message playback.

### 10.3 Delete a message

1. Press the left  in standby mode, **Answer Phone** is displayed.
2. Press the left , **View messages** will be displayed if there are messages.
3. Press the left , a list of messages is displayed with the most recent first.
4. Scroll  or  to select a new message.
5. Press the left , scroll  to select **Delete message**.
6. Press the left , a confirmation request is shown.
7. Press the left  to confirm.

## 10.4 Delete all messages

1. Press the left  in standby mode, **Answer Phone** is displayed.
2. Press the left , **View messages** will be displayed if there are messages.
3. Press the left , a list of messages is displayed with the most recent first.
4. Press the left , select **Delete old msgs.**
5. Press the left , "**Delete all old message?**" is shown.
6. Press the left  to confirm.

## 10.5 Outgoing messages

This is the message your callers hear on the answer machine. There are two pre-recorded outgoing messages, or you can record your own.














 



### 10.5.1 Answer and record

The pre-set outgoing message, that allows your caller to leave a message, is 'Hello, your call cannot be taken at the moment, so please leave your message after the tone'.

### 10.5.2 Answer only






The caller can listen to your outgoing message but cannot leave a message. The pre-recorded message is 'Hello, your call cannot be taken at the moment, and you cannot leave a message, so please call later.'

### 10.5.3 Record, play or delete your own outgoing message




 

 
1. Press the left  in standby mode, **Answer Phone** is displayed.
2. Press the left , scroll  to **Outgoing msg.**
3. Press the left , scroll  to select **Ans. & record** or **Answer only**.
4. Press the left , scroll  or  to select **Record message**, **Play message**, or **Use default msg** and press the left .
  - If you select **Record message**, once you hear the beep, speak your outgoing message into the handset. To end and save your recording, press the left . The recorded outgoing message will play back.
  - If you select **Play message**, the current outgoing message will play back.
  - If you select **Use default msg**, press the left  and scroll  or  to select **On** or **Off**. Press  then  or  to select male or female voice recording. Press the left  to confirm.

## 10.6 Record memo



 

 

 

This is the voice memo you leave on the answering machine for your family.

1. Press the left  in standby mode, **Answer Phone** is displayed.
2. Press the left , scroll  to **Record memo**.
3. Press the left . Start recording your memo once you hear the beep, speak your message into the handset.
4. Press the left  to save, stop recording and listen to the memo.



5. Press the left  to save or the right  to delete your memo. To record another memo, repeat steps 1 - 4.
6. Your family will see the notification on the handset screen. Press  to access the details of all memos, then scroll  or  to select a memo and press  to listen to the memo.







 
 


## 10.7 Answer mode .

1. Press the left  in standby mode, **Answer Phone** is displayed.
2. Press the left , scroll  to **Answer mode**.
3. Press the left , scroll  to **Answer mode**, then scroll  or  to select **On** either **Ans. & Rec** or **Answer only**.
4. Press the left  to save.

## 10.8 Settings



 




### 10.8.1 Ring delay

Select the duration of rings before your answer machine picks up the call. Choose from 2-10 rings or **Time saver**.

- When set to **Time saver**, if you have new messages, your phone answers after 2 rings.
  - If there are no new messages, it will answer after 6 rings. So you have the option to hang up, saving the time and cost of a call.
  - If the memory is full, it will automatically revert to **Answer only** mode.
1. Press the left , **Answer Phone** is displayed.
  2. Press the left , scroll  to **Settings**.
  3. Press the left , scroll  to **Ring Delay**.
  4. Press the left , scroll  or  to select either **Answer only** or **Ans. & record**.
  5. Press the left , scroll the left and right navigation keys to select the number of rings required and press the left  to confirm.











### 10.8.2 Set the maximum length of message and alert

The maximum length of a message your caller can leave can be set to 3 minutes.

1. Press the left , in standby mode, **Answer Phone** is displayed.
2. Press the left , scroll  to **Settings**.
3. Press the left , scroll  to **Ans. & record**.
4. Press the left , under **Max. msg length**, scroll the left or right navigation key to select an option.
5. Press the left  to save.





 

 








 

### 10.8.3 Call screening

When activated, you can hear the caller who is leaving a message. Then you can choose whether to pick up the call or not.

1. Press the left  in standby mode, **Answer Phone** is displayed.
2. Press the left , scroll  to **Settings**.
3. Press the left , scroll  to **Call screening**.
4. Press the left , then **Handset** is displayed.
5. Press the left , scroll  or  to select **On** or **Off**; or
6. Press the left  to save.

### 10.8.4 Set the answer machine auto on/off

You can set the time when the answer machine turns on or off.

1. Press the left , **Answer Phone** is displayed.
2. Press the left , scroll  to **Settings**.
3. Press the left , scroll  to **Auto on/off**.
4. Press the left , under **On/off**, scroll  or  to select **Off**, **On once**, **Daily**, **Mon - Fri**, **Sat** or **Sun**.
5. Scroll  to **On time**, enter the time for the answer machine to switch on (HH:MM) e.g. 04:30.
6. Scroll  to **AM/PM**, if you have selected the 12 hours format (see page 32), scroll  or  to select **AM** or **PM**.
7. Scroll  to **Off time**, enter the time for the answer machine to switch on (HH:MM) e.g. 04:30.
8. Scroll  to **AM/PM**, if you have selected the 12 hours format (see page 32), scroll  or  to select **AM** or **PM**.
9. Press the left  to save.











### 10.8.5 Remote access

You can operate your answering machine from any DTMF phone by calling your product and entering a 4 digit security PIN code.













1. Dial your telephone number. When you hear your outgoing message, press \* to enter remote access mode.
2. Enter your 4-digit PIN (default setting 0000) you will hear a confirmation beep. Use the keypad to operate the answering machine.

Press 1 to listen to the current message again.	Press 6 to listen to the next message.
Press 2 to listen to all messages.	Press 8 to listen to outgoing messages.
Press 3 to delete the current message.	Press 9 to record an outgoing message.
Press 4 to listen to the previous message.	Press 0 to enter the remote access menu.
Press 5 to turn the answering machine on or off.	Press # to enter answer mode.







 
### Set the remote access on/off

1. Press the left , **Answer Phone** is displayed.
2. Press the left , scroll  to **Settings**.
3. Press the left , scroll  to **Remote access**.
4. Press the left , select **On/off**.
5. Press the left , scroll  or  to select **On** or **Off**.
6. Press the left  to confirm.

### Change the remote PIN

1. Press the left , **Answer Phone** is displayed.
2. Press the left , scroll  to **Settings**.
3. Press the left , scroll  to **Remote access**
4. Press the left , scroll  to select **Change PIN**.
5. Press the left , you need to recall the old PIN that is used for the remote access and call control.
6. Press the left , enter the old PIN.
7. Press the left , enter the new PIN.
8. Press the left , enter the new PIN again.
9. Press the left  to confirm.

## 10.9 Telephone answer machine language


1. Press the left , **Answer Phone** is displayed.
2. Press the left , scroll  to **DTAM Language**.
3. Press the left , scroll  or  to select the required language and press the left  to confirm.

## 11. Help

### No dial tone.

- Use only the supplied telephone line cord.
- Make sure that the telephone line cord is properly connected.
- Make sure that the power plug is securely connected and switched on.
- Make sure that the batteries are correctly inserted and fully charged. Use only the approved rechargeable batteries supplied.


### No display.

- Make sure that the batteries are correctly inserted and fully charged. Use only the approved rechargeable batteries supplied.
- Make sure that the handset is switched on. Press and hold .
- Reset the base by removing the handset batteries and disconnecting the power supply. Wait for about 15 seconds before connecting it again. Allow up to 1 minute for the handset and base to synchronize.

### flashes or has disappeared.

- The handset is out of range. Move it closer to the base.
- Make sure that the handset is registered to the base.
- Make sure that the power plug is properly connected and switched on.

### is not scrolling during charging.

- Clean the charging contacts with a cloth moistened with alcohol.
- Make sure that the power plug is properly connected and switched on.
- The battery is full. When the handset is fully charged,  will appear steadily on the display.

### No Caller ID.

- Check your subscription with your network operator.
- The caller may have withheld their number.
- The record cannot be found in your phonebook. Make sure that you have the correct name / number stored in your phonebook, with the full area code.

### Cannot store a phonebook entry.

- The phonebook is full. Delete an entry to free up memory.

### Cannot register a handset to the base.

- You can register up to a maximum of 6 handsets to a DOT41 base. You must deregister a handset in order to register a new one.
- Make sure that you have entered the correct PIN code (default = 0000).
- Make sure that you are at least one meter away from other electrical equipment to avoid interference when registering the handset.
- The display shows **Searching**. You must deregister a handset in order to register a new one.

### **Handset does not ring.**

- The handset ringer volume may have been set to **Off**.
- Increase the volume.
- Make sure the blocking mode is turned off (see page 26).

### **Noise interference on my phone or on other electrical equipment nearby.**

- Place your phone at least one meter away from electrical appliances or any metal obstructions to avoid any risk of interference.
- Your base or charger cradle may be too close. Move it as far away as possible.

### **Answer machine does not record messages.**

- Switch the answer machine on.
- The memory may be full. Delete some messages.
- Answer mode may be set to **Answer only**. Change the mode to **Ans. & record**.

### **Cannot access messages remotely.**

- Remote access may be switched off.
- If the wrong PIN is entered, a beep is played. You can enter the PIN again.

### **Cannot record announcement.**

- The memory may be full. Delete some messages.

### **Answer machine stops automatically.**

- The memory may be full. Delete some messages.
- The maximum message length is 3 minutes.

## 12. Technical Specifications

RF Frequency Bands	1920MHz to 1930MHz (USA and Canada) 1910MHz to 1930MHz (Latin America) 1880MHz to 1900MHz (Europe and UK)
RF Transmission Power	< 24dBm for Europe and UK
RF Channels	5 channels for USA and Canada 10 channels for Europe and UK
Power Supply for Base	DC 5.0V, 1.0A
Base Adaptor Power Rating	Input: AC 100V to 240V, 50/60Hz Output: DC 5.0V, 1.0A
Power Supply for Handset	2x DC 1.2V AAA 750mAh Ni-MH rechargeable batteries
Battery Information	HFR-AAA750 manufactured by Shenzhen Highpower Technology Co., LTD, or 55AAAHc manufactured by GPI International LTD
Power Supply for Charger	DC 6.0V, 0.4A
Charger Adaptor Power Rating	Input: AC 100V to 240V, 50/60Hz Output: DC 5.0V, 1.0A
Talk time	18 hours
Standby time	240 hours

## 13. General information

### Cleaning

- Clean the handset and base (or charger) with a damp (not wet) cloth, or an anti-static wipe.
- Never use household polish as this will damage the product. Never use a dry cloth as this may cause static shock.

### Environmental

- Do not expose to direct sunlight.
- The handset may become warm when the batteries are being charged or during prolonged periods of use. This is normal. However, we recommend that to avoid damage, do not place the product on antique / veneered wood.
- Do not place your product on carpets or other surfaces which generate fibres, or place it in locations preventing the free flow of air over its surfaces.
- Do not submerge any part of your product in water and do not use it in damp or humid conditions, such as bathrooms.
- Do not expose your product to fire, explosives or other hazardous conditions.
- There is a slight chance that your phone could be damaged by an electrical storm. We recommend that you unplug the power and telephone line cord during an electrical storm.

### Product disposal instructions

#### Product disposal instructions for residential users

When you have no further use for it, please remove any batteries and dispose of them and the product according to your local authority's recycling processes. For more information, please contact your local authority or the retailer where the product was purchased.

#### Product disposal instructions for business users

Business users should contact their suppliers and check the terms and conditions of the purchase contract and ensure that this product is not mixed with other commercial waste for disposal.



### Consumer Products and Accessories Warranty

Thank you for purchasing this Motorola branded product manufactured under license by Meizhou Guo Wei Electronics Co. Ltd., AD1 section, Economic Development Area, Dongsheng Industrial District, Meizhou, Guangdong, China. ("MZGW")

#### What Does this Warranty Cover?

Subject to the exclusions contained below, MZGW warrants that this Motorola branded product ("Product") or certified accessory ("Accessory") sold for use with this product that it manufactured to be free from defects in materials and workmanship under normal consumer usage for the period outlined below. This Limited Warranty is your exclusive warranty and is not transferable.

## Who is covered?

This warranty extends only to the first consumer purchaser, and is not transferable.

## What will MZGW do?

MZGW or its authorized distributor at its option and within a commercially reasonable time, will at no charge repair or replace any Products or Accessories that do not conform to this limited warranty. We may use functionally equivalent reconditioned / refurbished / pre-owned or new Products, Accessories or parts.

## What Other Limitations Are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR OR REPLACEMENT PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA OR MZGW BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT OR ACCESSORY, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS OR ACCESSORIES TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from one jurisdiction to another.

Products Covered	Length of Coverage
<b>Consumer Products</b>	<b>Two (2) years</b> from the date of the products original purchase by the first consumer purchaser of the product.
<b>Consumer Accessories (battery, power supply(s) and line cords)</b>	<b>Ninety (90) days</b> from the date of the accessories original purchase by the first consumer purchaser of the product.
<b>Consumer Products and Accessories that are Repaired or Replaced</b>	<b>The balance of the original warranty or for ninety (90) days</b> from the date returned to the consumer, whichever is longer.



## Exclusions

**Normal Wear and Tear.** Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

**Batteries.** Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty.

**Abuse & Misuse.** Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of Motorola or MZGW are excluded from coverage.

**Use of Non-Motorola branded Products and Accessories.** Defects or damage that result from the use of Non-Motorola branded or certified Products or Accessories or other peripheral equipment are excluded from coverage.

**Unauthorized Service or Modification.** Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Motorola, MZGW or its authorized service centers, are excluded from coverage.

**Altered Products.** Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola branded housings, or parts, are excluded from coverage.

**Communication Services.** Defects, damages, or the failure of Products or Accessories due to any communication service or signal you may subscribe to or use with the Products or Accessories is excluded from coverage.

### How to Obtain Warranty Service or Other Information?

To obtain service or information, please visit:

<https://motorolavoice.com/support/>

You will receive instructions on how to ship the Products or Accessories at your expense and risk, to a MZGW Authorized Repair Center.

To obtain service, you must include: (a) the Product or Accessory; (b) the original proof of purchase (receipt) which includes the date, place and seller of the Product; (c) if a warranty card was included in your box, a completed warranty card showing the serial number of the Product; (d) a written description of the problem; and, most importantly; (e) your address and telephone number.

## **Technical Information**

### **How many telephones can I have?**

All items of telephone equipment have a Ringer Equivalence Number (REN), which is used to calculate the number of items which may be connected to any one telephone line. Your DOT41 has a REN of 1. A total REN of 4 is allowed. If the total REN of 4 is exceeded, the telephones may not ring. With different telephone types, there is no guarantee of ringing, even when the REN is less than 4.

Any additional handsets and chargers that you register have a REN of 0.

The product operates in the frequency range of 1880 to 1900MHz, and the RF transmission power is 250mW (Max.)

### **RE Directive**

The equipment complies with the essential requirements for the Radio Equipment Directive 2014/53/EU.

### **Connecting to a switchboard**

This product is intended for use within Europe for connection to the public telephone network.

# FCC, ACTA and IC regulations

## FCC Part 15

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:•

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Privacy of communications may not be ensured when using this telephone.

To ensure safety of users, the FCC has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with the FCC criteria. Both the Handset may be safely held against the ear of the user. The telephone base shall be installed and used such that parts of the user's body other than the hands are maintained at a distance of approximately 20 cm (8 inches) or more.

This Class B digital apparatus complies with Canadian ICES-003.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

## FCC Part 68 and ACTA

This equipment complies with Part 68 of the FCC rules and with technical requirements adopted by the Administrative Council for Terminal Attachments (ACTA). This Product Complies With 47CFR PART 68.

The plug and jack used to connect this equipment to premises wiring and the telephone network must comply with applicable Part 68 rules and technical requirements adopted by ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. An RJ11 jack should normally be used for connecting to a single line and an RJ14 jack for two lines. See Installation Instructions in the User's Guide.

The Ringer Equivalence Number (REN) is used to determine how many devices you may connect to your telephone line and still have them ring when you are called. The REN for this product is encoded as the 6th and 7th characters following the US: in the product identifier (e.g., if ## is 03, the REN is 0.3). In most, but not all areas, the sum of all RENs should be five (5.0) or less. For more information, please contact your local telephone company.

This equipment may not be used with Party Lines. If you have specially wired alarm dialing equipment connected to your telephone line, ensure the connection of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

If this equipment is malfunctioning, it must be unplugged from the modular jack until the problem has been corrected. Repairs to this telephone equipment can only be made by the manufacturer or its authorized agents. For repair procedures, follow the instructions outlined under the Limited Warranty.

If this equipment is causing harm to the telephone network, the telephone company may temporarily discontinue your telephone service. The telephone company is required to notify you before interrupting service. If advance notice is not practical, you will be notified as soon as possible. You will be given the opportunity to correct the problem and the telephone company is required to inform you of your right to file a complaint with the FCC. Your telephone company may make changes in its facilities, equipment, operation, or procedures that could affect the proper functioning of this product. The telephone company is required to notify you if such changes are planned.

If this product is equipped with a corded or cordless handset, it is hearing aid compatible. If this product has memory dialing locations, you may choose to store emergency telephone numbers (e.g., police, fire, medical) in these locations. If you do store or test emergency numbers, please:

- Remain on the line and briefly explain the reason for the call before hanging up.
- Perform such activities in off-peak hours, such as early morning or late evening.

# **FCC Exposure to Radio Frequency (RF) Signals**

## **For Handset**

This is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on the safety standards previously set by both U.S. and international standards bodies. These standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. This device and its antenna must not be collocated or operating in conjunction with any other antenna or transmitter. This product has been shown to be capable of compliance for localized specific absorption rate (SAR) for uncontrolled environment/general population exposure limits specified in ANSI/IEEE Std. C95.1-1992 and had been tested in accordance with the measurement procedures specified in FCC/OET Bulletin 65 Supplement C (2001) and IEEE 1528.

## **For Base**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

## **ISED Warning**

This device complies with Innovation, Science, and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

The device is compliance with RF exposure guidelines, users can obtain Canadian information on RF exposure and compliance.

## **ISED Specific Absorption Rate (SAR) information**

### **For Handset**

SAR tests are conducted using standard operating positions accepted by the ISED with device transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. Before a new model device is available for sale to the public, it must be tested and certified to the ISED that it does not exceed the exposure limit established by the ISED, tests for each device are performed in positions and locations as required by the ISED. For body worn operation, this model device has been tested and meets the ISED RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal.

### **For Base**

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

## **CS-03:**

This product meets the applicable ISED technical specifications.


 
 




The REN is an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed five.

### **REN: 0.1**


 
 
 
 
## California Energy Commission(CEC)/Canada Battery Charger(NRCAN) Battery Charging Testing

It is not necessary to activate testing mode during normal usage, unless you want to charge the battery only and disable all telephone functions.

### To activate the battery charge testing mode:

1. Ensure handset and base are powered and in range.
2. Press the left , and enter **\*2201** to enter **Test mode**.
3. Scroll , select **Base** and press the left .
4. Scroll  or  to **BS CEC Mode** and press the left .
5. Press .

### To deactivate/exit the battery charge testing mode.

1. Unplug the base power, reconnect the base power.
2. Press the left , and enter **\*2201** to enter **Test Mode**.
3. Select **Handset** and press the left .
4. Scroll  or  to **HS CEC Mode** and press the left .
5. After the handset has linked to the base, it will be back to normal mode.

## EU Declaration of Conformity

Hereby, MZGW declares that the radio equipment type is in compliance with RE Directive 2014/53/EU.

## UK Declaration of Conformity

Hereby, MZGW declares that this product is in compliance with the requirements for UKCA marking.

Both the Declaration of Conformity for EU and UK can be obtained at: <https://motorolavoice.com/support/declaration-of-conformities/>

## Manufactured by:

Meizhou Guo Wei Electronics Co., Ltd., AD1 Section, The Economic Development Area, Meizhou, 514000, Guangdong Province, China

## Imported & Distributed by:

Meizhou Guo Wei Electronics (UK) Co., Ltd., 207 Regent Street, Suite 8, Third Floor, London, W1B 3HH. UK

Meizhou Guo Wei Electronics (EU) Co., Ltd., 51 Bracken Road, Carlisle Offices, Dublin 18, D18 CV48. Ireland

Contact email address: [support@motorolavoice.com](mailto:support@motorolavoice.com)

Manufactured, distributed or sold by Meizhou Guo Wei Electronics Co. LTD., official licensee for this product. MOTOROLA and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. and are used under license. All other trademarks are the property of their respective owners. © 2025 Motorola Mobility LLC. All rights reserved.

Version 2 (EN)



Séparez les éléments avant de trier



Points de collecte sur [www.quefairedesdechets.fr](http://www.quefairedesdechets.fr)  
Privilégiez la réparation ou le don de votre appareil !

